

Quick Pclix XT Programming Guide



- If an option is set ON then the
- LED startup sequence will flash
- as indicated under Start Up.

To enter Programming Mode turn OFF your Pclix XT, HOLD down red FIRE button, turn ON your Pclix XT, wait for 3 RED flashes to finish then release the red Fire button.

Start Up	Pclix Features	Code	Option	Steps for Programming Sequence
<ul style="list-style-type: none"> ○ ● ○ ● ○ ○ 	Split	00	Off	Set code, enter Programming Mode, release FIRE button, after 4 Green flashes turn OFF Pclix XT.
	Second	01	On	
<ul style="list-style-type: none"> ● ● ○ ● ○ ● 	Delayed Start	10 11	Off On	Set code, enter Programming Mode, release FIRE button, after 4 Green flashes turn OFF your Pclix XT.
	1 Sec to 100 Hrs	12	Length	Set code, enter Programming Mode, release Fire button, after 1 Green set Hours, push Fire, after 2 Greens set Minutes, push FIRE, after 3 Greens set Seconds, push FIRE, after 4 Greens turn OFF.
	Image Count	20 21	Off On	Set code, enter Programming Mode, release FIRE button, after 4 Green flashes turn OFF your Pclix XT.
<ul style="list-style-type: none"> ○ ● ● ● ○ ● 	1 to 9,999	22	Count	Set code, enter Programming Mode, release Fire, after 2 Greens set Thousands & Hundreds, push FIRE, after 3 Greens set Tens & Ones, push FIRE button, after 4 Greens turn OFF Pclix XT.

Start Up	Pclix Features	Option	Code	Steps for Programming Sequence
<ul style="list-style-type: none"> ○ ● ○ ● ● ● 	Bulb	Off On	30 31	Set code, enter Programming Mode, release FIRE button, after 4 Green flashes turn OFF Pclix XT.
	1 Sec to 59:59	Length	32	Set code, enter Prog Mode, release FIRE button, after 2 Greens set Minutes, push FIRE, after 3 Greens set Seconds, push FIRE, after 4 Greens turn OFF Pclix XT.
	Program Camera Model Code		50 to 89	Set dials to desired Camera Model, 50-89 (see user manual for details), enter Prog Mode, release FIRE, after 4 Greens turn OFF Pclix XT.
Program Custom User Intervals			90 to 99	Choose a register 90 to 99, enter Programming Mode, after 1 Green flash set Hours, push Fire, after 2 Greens set Minutes, push FIRE, after 3 Greens set Secs, push FIRE, after 4 Greens turn OFF Pclix XT.

Other user preferences*; 33/34 - Bulb Toggle Mode, 40-Trigger Length, 41-Trigger Warning, 42/43-LED Swap, 44-Infrared Repeats, 45-Quick Canon Setup, 46-Save Setup, 47-Recall Setup, 48-FW Version, 49-Pclix XT Reset. *See manual for info.

This Guide is meant for quick reference only, detailed operating instructions for the Pclix XT can be found in your User Manual or downloaded from our website. Enjoy.



www.pclix.com

1017 Visual Effects Inc. - copyright©2011